


Quick Start Guide



HDT-4400S

Full HD DVB-T/T2 receiver
and media player

Package

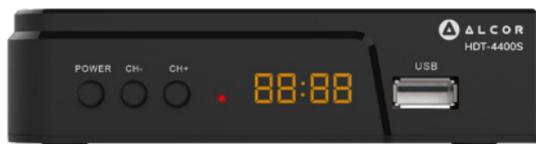

Üzembehelyezési útmutató









 **ALCOR**

HDT-4400S

Full HD DVB-T/T2 receiver
and media player

Install

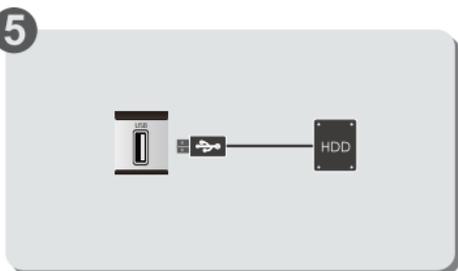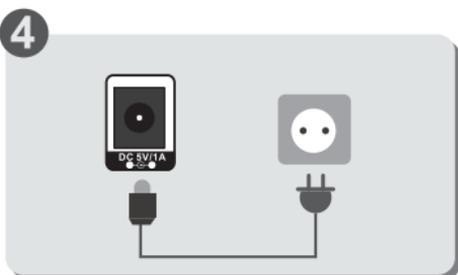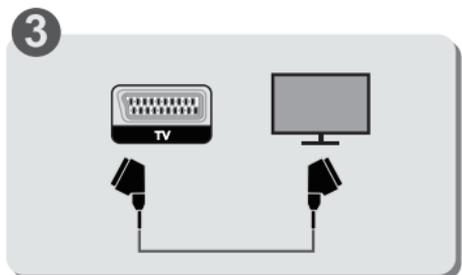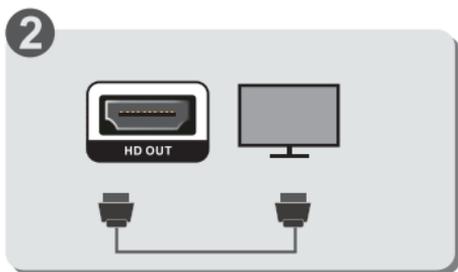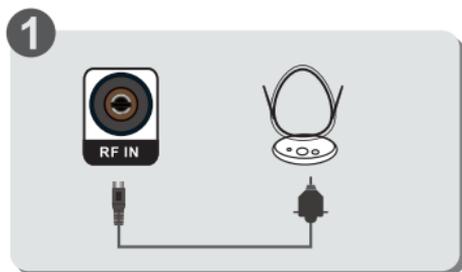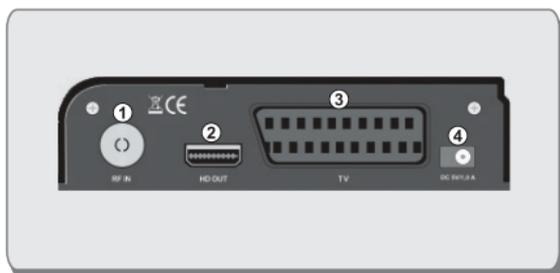

Remote controller




- POWER** Switch your receiver on or off
- MUTE** Enable or disable the audio
- 0-9** Select channel or type numbers
- TV/RADIO** Switch between TV and Radio mode
- RECALL** Return to the previous menu or status
- TV/STB** Switch between TV and receiver mode
- INFO** Current channel status or program information
- EPG** Programs guide on screen when available
- MENU** Main Menu on the screen or return to the previous menu or status
- EXIT** Cancel the selection and return to the viewing mode from the menu
- OK** Select menu option or confirm entry
- ◀▶ VOL+/VOL-** Adjust volume level, or to move cursor left or right in the menu
- ▲▼ CH+/CH-** Change channels, or to move cursor up or down in the menu
- PAGE+/PAGE-** Move up the cursor to the next or previous page in the menu or channel list
- REC** Record program to local storage such as USB stick
- (TXT)** Show teletext of the current channel
- (SUB)** Subtitle display
- Q FIND** Find channels sort by character
- (TIMER)** Setup up the Standby time
- V.FORMAT** Switch between display resolutions
- FAV** Favorite channels
- (FOLDER)** Enter the Record Manager menu
- AUDIO** Audio channels (Left/Right/Stereo/Mono)
- (USB)** Remove the USB stick safely
- ▶||** Play or pause the multimedia files
- Time Shift, stop playing or recording
- ◀◀▶▶** Quick playing forward or reverse
- ◀◀▶▶** Jump to previous or next file

First time installation

System menu

- Press the ◀ ▶ keys to select menu items among Language, AV Setting, Time Setting, Timer, Parental Control, Miscellaneous settings, Software Upgrade, Default Setting and Information.
- Press the OK key to enter the selected item.

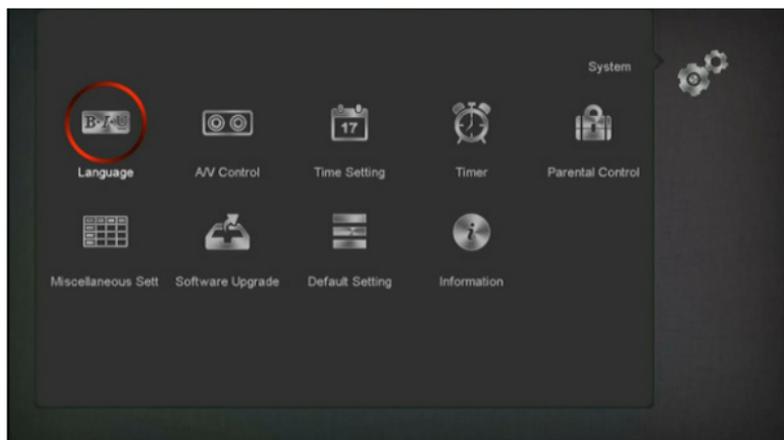

Language selection

- Use the ◀ ▶ keys to select the desired language.
- Repeat it in all rows you need.
- Press the OK key to enter the selected item.



First time installation

Date and time setting

- You can set the time auto or manual.
When you want to set time manual, in this case, you need to enter correct time in date and time field with 0-9 button.
- Select the correct summertime according to your time zone.
- You can switch on the front display.





A/V beállítások

- Here you need to select the desired resolution depending on your HD TV set.
- Confirm with OK button.



Terrestrial installation:

- Press **OK** key to enter the Installation.
- If Menu Lock is „On”, it will display a dialogue for user to enter in password.
- The default password is **0000**.
- Use the ◀ ▶ keys to select the right area.
- When you use active antenna switch on the Tuner Power.
- Press the  key to blind scan mode to scan the current programs.
- Press the  key to set channels manually.

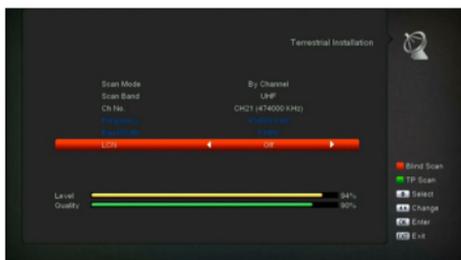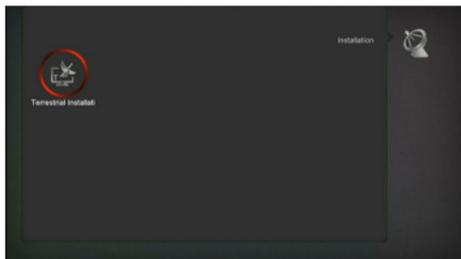

Troubleshooting

No Video on TV

- Check first if the connection between the Receiver and Electric Power through the Cable or Power Supply is done properly.
- Check for lights on the front panel if the Receiver is working fine.
- Check if the connection between the Receiver and the TV via HD or RCA Cable is done properly.
- Try to connect another HD or RCA Cable.

No Signal On Channel

- Check the connection between the Receiver and Antenna Connection through Antenna Cable.
- Check if the FTA channel you have selected is currently on air.
- Check if the channel you have selected is encrypted has the corresponding access smartcard.
- Check if the Antenna Signal is correct.

No Audio or poor quality Audio

- Check if the connection between the Receiver and the TV through HD or RCA Cable is well.
- Check the volume level of your TV and Receiver.
- Check if your TV or Receiver is in Mute mode. If yes, then turn off Mute mode.

Remote control does not work

- Check if RCU batteries are inserted correctly and if they are still working
- Try to point the RCU to the right direction with no obstacles between TV and RCU IR.

Specifications are subject to change without prior notice.

The manufacturer does not take any responsibility regarding any errors or mistakes in printing.

Please note that a new software may change the features of the receiver.

The manufacturer holds the rights of changes without any further notice.



Distributor
Expert Zrt.
1044 Budapest, Óradna u. 12.
<http://expert.hu>