



SK5000CC
Power Bank



USER MANUAL

INTRODUCTORY

Thank you for purchasing our product. For convenient and safe use, please read this manual carefully before using the product!

With the portable emergency charger, you can easily charge your battery-powered devices, even when there is no outlet or power supply nearby.

The device can be used for any device that requires 5V charging voltage (e.g. smartphones, navigation devices, music players, Bluetooth devices, cameras, portable gaming consoles). However, please note that if you use the two charging outputs at the same time, the device can deliver a maximum of 2.4A.

WARRANTY

The warranty conditions are included in the warranty card attached to the device.

Please note that the capacity of the battery in the device decreases over time and use. The decrease in capacity is a normal phenomenon that is not covered by the warranty. The battery life is approximately 500 charging cycles. The life depends on usage habits and environmental parameters.

The capacity of the built-in battery may differ from the factory value in extreme temperature conditions.

The manufacturer or the distributor is not responsible for damage or malfunctions resulting from improper use of the device! The warranty for the device only covers the emergency charging unit and does not apply to other devices used or charged with the device.

TECHNICAL SPECIFICATIONS

Rated capacity: 5000mAh, 18Wh

Input: USB Type-C, DC 5V, max. 2.4A

Output: USB Type-C male, DC 5V, max. 2.4A

Output: USB Type-C female, DC 5V, max. 2.4A

Operating temperature range: 0-40 °C

4-stage battery capacity and charging feedback

Over-current, over-voltage, short circuit, discharge, overcharge, overheating protection

Expected battery life about 500 charging cycles

USE

Manual on/off

The power bank can be turned on by pressing the function button once, at which time the battery charge status can be checked. The device will turn off automatically after about 30 seconds or by long pressing the button.


Charging the power bank

The device's battery can be charged with a max. DC 5V, 2.4A mains charger or via a computer's USB port. In the latter case, charging may take longer, depending on the charging current. The LED corresponding to the charge level on the display will light up, and the indicator light next to it will start flashing. Full charge is indicated by the combined lighting of all 4 LEDs.

| | 0-25% | 25-50% | 50-75% | 75-99% | 100% |
|-------|-------|--------|--------|--------|------|
| LED 1 | blink | o | o | o | o |
| LED 2 | - | blink | o | o | o |
| LED 3 | - | - | blink | o | o |
| LED 4 | - | - | - | blink | o |

Charging devices

When a mobile device is connected, the power bank automatically turns on and starts charging. The device can also be turned on and off manually. A short press of the function button turns it on and a long press turns it off. During charging, the indicator lights turn off one after the other depending on the remaining energy.

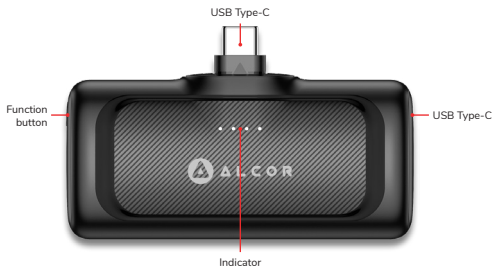

HANDLING WARNINGS AND NOTES

Do not expose the device to heat or throw it into a fire!

Protect the device from impacts, drops, and other physical damage!

Make sure that the device is not exposed to moisture or humidity!

Do not disassemble or attempt to modify the device! Do not bend it!

Do not remove the battery!

Store the device in a dry, dust-free place at room temperature! Make sure that the device is not exposed to corrosive substances! If the device is not used for a long time, we recommend charging the battery at least every 3 months to increase its service life!

If the device turns off due to over-voltage or short circuit, remove the device causing the problem from the emergency charger! The charger can be used again after turning it on.

Do not store the device in a closed, narrow place (e.g. handbag, drawer) while charging. The heat generated during charging cannot escape, which can shorten the life of the device and the device it is charging. Always charge the device in a place with adequate ventilation!

Stop using the device immediately if the shape of the device or the device it is charging changes (e.g. it swells, the casing cracks, etc.)!

Do not change the input or output connectors of the device during use!

Do not throw the device that is no longer needed into household waste, but always hand it in at a hazardous waste collection point or in a waste yard!

Do not put the device in a microwave oven or in a pressurized container!

Stop using the device immediately if you notice any of the following.

The device emits an unusual odour, suddenly becomes too hot, the colour or shape of the device changes, or you experience other unusual phenomena!

Do not expose the device to heat or keep it near heat sources, especially if the device emits a strange odour or liquid is leaking from it!

If liquid is leaking from the device, do not touch it! If liquid gets into your eyes, rinse with plenty of water and consult a doctor immediately!

Keep out of reach of children!

The charger may only be used by persons with reduced physical, mental or other mental capabilities or lack of knowledge and experience under supervision and after having been instructed on how to use the device safely!

The total charging time is for informational purposes only, the actual values depend on usage habits and environmental parameters.

The capacity available for charging is less than the total capacity of the battery.

Due to our continuous product development, the appearance and properties of the device may differ from those described in this manual.

The device to be charged must always be used with the appropriate cable, preferably the original cable!

The battery built into the device may heat up slightly during charging or other use. This is normal.

Product features, technical parameters, handling and control methods, and package contents are subject to change without prior notice.